San Dy®
Dynamic
Japan

使用說明書
Instruction Manual

智能電燉盅
Electric Stewpot

Model : SDS-8042

SAN DYNAMIC LTD.
Customer Hotline:(852)8206 2666
www.san-dynamic.com

目　　錄

產品介紹----------1
產品規格----------1
注意事項----------2
部件名稱----------3
操作說明----------3
維修保養----------6
包裝清單----------6

產 品 介 紹

1、選用優質內鍋，煲燉食物更加營養、健康；
2、隔水煲燉，不粘不焦，有效保留食物營養成份；
3、採用 IMD 面板及液晶屏顯示，更顯尊貴；
4、專業功能設計，特別適合燉煮珍貴美食；
5、透明本體上蓋設計及玻璃內膽，燉煮過程一目了然；
6、多重安全保護裝置，確保產品使用安全。

產 品 規 格

型號	SDS-8042
額定電壓	220-240V~ 50/60Hz
額定功率	100-120W
額定容量	0.7L
淨重	1.35Kg
外形尺寸	(長)192mm X (寬)179mm X (高)188mm

注 意 事 項

1、請使用電壓為220伏特的交流電源。
2、請使用有合格保護接地的電源，以確保人身安全。
3、不要放在易燃易爆的物品附近或表面使用；不要放在潮濕或靠近其他熱源的地方使用，以免發生故障和危險。
4、使用本產品時應放置在兒童接觸不到的穩固平臺上。
5、產品工作時上蓋蒸氣口會冒出蒸氣，切勿將臉或手靠近蒸氣口，以免燙傷；怕蒸氣的物體不要置於本產品上方；切勿將抹布或類似物品覆蓋在蒸氣口上，以避免引發意外或導致產品故障。
6、產品工作時，燉盅容器、上蓋溫度較高，請勿觸摸以免燙傷。
7、不要將內鍋直接放在明火上加熱，並避免陶瓷件、玻璃件在較熱時接觸冷水，以免發生爆裂。
8、若產品出現缺水幹燒，請立即拔掉電源，等待冷卻後再操作，此時切勿用手觸摸傳熱盤以免燙傷。
9、加水量應低於“放盅前最高水位線（MAX）”，以浸過內鍋一半為宜，加水過少或過多，都可能出現故障或造成危險。
10、插入電源線時，必須插到底，以確保接觸良好。
11、應經常保持電源插頭、插座的乾燥，禁止用濕手插拔電源插頭，以防止觸電。
12、產品在通電工作時，請勿移動。
13、按動按鍵時切勿用力過猛，以免損壞按鍵。
14、玻璃件為易碎物品，慎防硬物碰撞及從高處跌落，造成破碎損壞。

部 件 名 稱

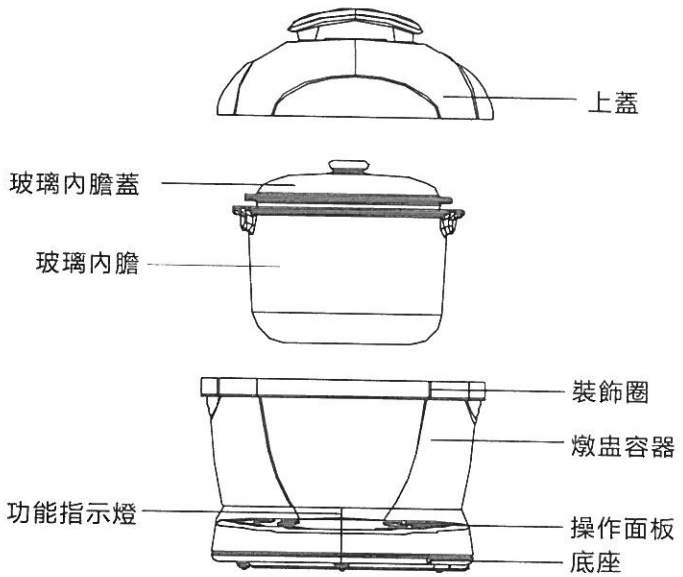

操 作 說 明

1、在內鍋中放入需燉煮的各類食物並加入適量的水（以恰好浸沒食物或略多一點為宜），再蓋上陶瓷（或玻璃）內鍋蓋。
2、先在燉盅容器內加入適量水（以加水至燉盅容器所標示的最高水位線MAX為佳），再將裝好食物的內鍋放入燉盅容器內，然後蓋上上蓋。
3、產品接通電源後，液晶屏背光燈點亮，進入待機狀態。再通過按“功能”鍵和“時”“分”鍵選取所需的功能和定時時間；

(1)、蟲草：按“功能”鍵一次，液晶屏上對應“蟲草”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為5小時，您可通過“時”、“分”鍵自行調節所需燉煮時間。以下各功能的燉煮時間操作相同）。當燉煮時間結束後，自動轉入保溫狀態。

(2)、花膠：連續按“功能”鍵二次，液晶屏上對應“花膠”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為2小時30分鐘）。當燉煮時間結束後，自動轉入保溫狀態。

(3)、參茸：連續按“功能”鍵三次，液晶屏上對應“參茸”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為30分鐘）。當燉煮時間結束後，自動轉入保溫狀態。

(4)、官燕：連續按“功能”鍵四次，液晶屏上對應“官燕”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為20分鐘）。當燉煮時間結束後，自動轉入保溫狀態。

(5)、甜品：連續按“功能”鍵五次，液晶屏上對應“甜品”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為2小時30分鐘）。當燉煮時間結束後，自動轉入保溫狀態。

(6)、乳酪：連續按“功能”鍵六次，液晶屏上對應“乳酪”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入製作乳酪的工作狀態（該功能的默認製作時間為9小時）。當製作時間結束後，蜂鳴器鳴叫片刻並回到待機狀態，提示用戶將製作好的乳酪取出。

(7)、標準：連續按“功能”鍵七次，液晶屏上對應“標準”的箭頭標及時間顯示閃爍片刻後變為常亮，開始進入燉煮工作狀態（該功能的默認燉煮時間為2小時30分鐘）。當燉煮時間結束後，自動轉入保溫狀態。（注：該功能較適合燉煮各類家常菜。）

(8)、保溫：連續按“功能”鍵八次，液晶屏上對應“保溫”的箭頭標及時間顯示“---”閃爍片刻後變為常亮，開始進入保溫工作狀態（該功能默認時間為無限時，且不可自行調節）。

(9)、預約：需在功能設定之前，按“預約”鍵一下。這時，“預約”指示燈點亮（默認燉煮時間為2小時）。再按“功能”鍵選定功能後開始進入工作狀態（在選定預定功能後若不按“功能”鍵，則“預約”無效，指示燈熄滅產品自動回到待機狀態）。

4、在燉煮的過程中可依您個人喜好重新調整時間，使食物達到最佳效果。

5、燉煮一定時間後，若您認為食物已燉至所需火候，只需按“取消”鍵一下即可。產品將停止工作，回到待機狀態。

6、產品使用完畢後，請將電源線拔掉以切斷電源。

溫馨提示：

1、往隔水燉盅容器內加水時請勿超過最高水位線（未放入內鍋前的水位）；

2、為確保食物的燉煮效果，各功能（“乳酪”、“保溫”功能除外）的默認時間為水開後開始計算的時間。例：“官燕”功能默認的20分鐘燉煮時間，是指水開後再燉煮20分鐘後自動轉保溫功能；

3、隔水燉盅燉煮過程若要打開上蓋時，請先按“取消”鍵停止工作。待水不再沸騰時再開蓋，以免燉盅容器內沸水濺出；

4、製作乳酪前需將內鍋用開水沖燙消毒後再使用。

5、“乳酪”功能工作結束後，產品將直接進入待機狀態。

6、優酪乳製作完成後，應呈乳白色或淡黃色、凝結細膩、無氣泡。若凝結不整齊、有氣泡及黴味，表示有雜菌污染，則不宜食用。

7、剛製作完成的乳酪可調味後食用。如不立即食用，請將乳酪放入冰箱冷藏鈍化後調味食用，口感更佳。

8、所有功能默認的保溫時間為無限時保溫，請根據您的需要自行按“取消”鍵停止保溫即可。

維 修 保 養

1、清洗方法：

(1)、產品清洗前應先拔掉電源線，待冷卻後再進行清洗。

(2)、陶瓷件、玻璃件、上蓋可用洗潔精和海綿清洗，請勿使用硬質鋼絲清洗，以免損壞表面。

(3)、可用濕毛巾擦拭燉盅容器外表面，切勿使用腐蝕性液體進行清洗．

(4)、切勿將電源線、產品整機浸入水中或沖洗，以免發生觸電危險和功能故障。

(5)、產品長期不使用時，請清潔擦淨後，裝入包裝箱中，應存放於通風乾燥的地方。

2、故障及排除：

序號	故障現象	故障原因	排除方法
1	不通電	電源線插頭沒插好	檢查電源插頭是否插緊到位
		產品故障	請送指定維修點檢修
2	蜂鳴器發出持續的短促鳴叫	使用前燉盅容器內沒有加水，造成幹燒	請先切斷電源，待往燉盅容器內加水後再通電操作
3	其它故障導致不能正常工作	產品故障	請送我司維修部維修

3、非專業人員切勿拆卸及維修本產品．

4、如果電源線損壞，必須用專用電源線更換，或到我司維修部維修。

5、當產品出現故障且無法排除時，切勿自行維修，請到我司維修部維修。

6、本產品中的玻璃件為易碎品，不在保修範圍內，請小心使用。

包 裝 清 單

項目	單位	數量
燉盅	檯	1
電源線	條	1
說明書	本	1
保養卡	張	1

CONTENTS

Product introduction----------7
Product specification----------7
Precautions----------8
Parts Identification----------9
Operation guide----------9
Maintenance service----------12
Pack list----------12

PRODUCT INTRODUCTION

1. Choicing high quality inner pot. Cooking tonic foods more nutritious and healthy.
2. Stewing foods are unsticker and over cooked to keep the nutritious of foods.
3. Using IMD panel and LCD screen display.
4. Speciallity functions design, Specially suitable to stewing tonic foods.
5. Transparence body and lid designed, stewing process be clear at a glance.
6. Multiple safety protection.

PRODUCT SPECIFICATION

Model	SDS-8042
Power Source	220-240V~ 50/60Hz
Rated Power	100-120W
Rated Capacity	0.7L
Net Weight	1.35Kg
Measurement	(L)192mm X (W)179mm X (H)188mm

PRECAUTIONS

1. Please use the same voltage as the rating label of the product.
2. Please use earth wire to assure safety.
3. Do not use the stewpot near or surface of flammable object. Do not use the stewpot near wet or hot place to avoid malfunction and danger happened.
4. Please use the stewpot out of childred's reach.
5. Do not cover the steam orifice with cloth and put face and hands to the stem hole when stewing to avoid causing accident and malfunction.
6. Because the stewpot especial the cover is very hot, Please do not touch it when use it to avoid sclad.
7. Do not put the glass/ceramic inner pot on the fire and hot or cold water suddent to avoid inner pot break.
8. The stewpot is protected from dry heating. In case of dry heating, please unplug the power cord immediately. Please re-use it when the temperature is cool down. Do not touch the heating plate to avoid scald.
9. Water should be lower the "MAX"water level,(better to soak half of the inner pot),too more or less water will cause damage.
10. Insert the power cord must be put through to make contact.
11. Always keep the power cord and socket dry,do not use the wet hand to pull the plug to avoid the electric shock.
12. Do not move when the stew pot is working.
13. Do not press the button too much to avoid damage button.
14. Please note that all ceramic parts are fragile, avoid hard objects collisions and from the broken down and damaged.

PARTS IDENTIFICATION

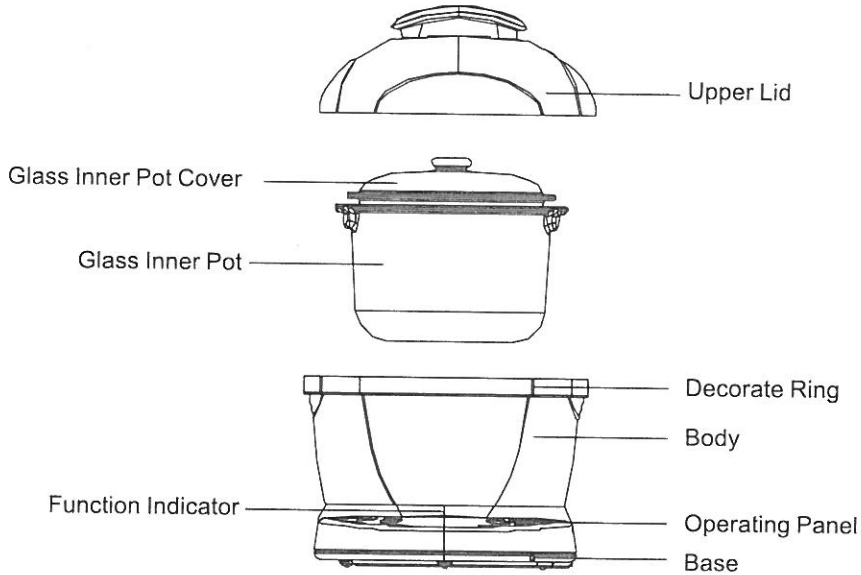

OPERATION GUIDE

1. Put the food and/or tonic materials into the ceramic inner pot, add in proper amount of water (just enough to cover the food or a little more), and place the glass inner cover on.
2. Put the ceramic inner pot into the main body of the stewpot, add proper amount of water into the main body (better to the maximum water level mark), and then cover it.
3. Connect the stewpot to a power source. LCD light is on and the stewpot will enter standby state. You can use the function/hour minute switch button and timing button to set the stewpot to work in your desired function and the desired timing.

(1). **Aweto** : Press function button once , the arrow will diect to"aweto"function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is 5 hours) . The stew time you desired can be adjusted throught press"hour" "minutue" buton. All functions below are the same) The stew pot is entered into standyby state automatically after stewing time finished.

(2). **Ichthyocolla** : Press function button twin , the arrow will diect to "ichthyocolla" function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is half and 2 hours) . The stew pot is entered into keep warm sate automatically after stewing time finished.

(3). **Qisherng/Antler** : Press function button 3 times , the arrow will diect to"Qisherng/Antle" function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is 30 minutes) . The stew pot is entered into keep warm sate automatically after stewing time finished.

(4). **Bird's Nest** : Press function button 4 times , the arrow will diect to"Bird's Nest"function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is 20 minutes) . The stew pot is entered into keep warm sate automatically after stewing time finished.

(5). **Sweet soup** : Press function button 5 times , the arrow will diect to"Sweet Soup"function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is half and 2 hours) . The stew pot is entered into keep warm sate automatically after stewing time finished.

(6). **Yoghourt** : Press function button 6 times , the arrow direct to"Yoghourt"function and show time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is 9 hours) . The stewpot is entered into standby sate automatically after buzzing for a while. Tip user to take out the yoghourt made.

(7). **Homely** : Press function button 7 times , the arrow direct to"Homely"function and show stewing time light on after flash for a while on the LCD, the stewpot is entered working state (The default time of this function is half and 2 hours) . The stew pot is entered into keep warm sate automatically after stewing time finished. (Remaks: This function is only suitable to stew various homely soups)

(8). **Keep Warm** : Press function button 8 times , The arrow diect to"Keep Warm"function and show stewing light on after flash for a while on the LCD, the stewpot is entered keep warm state. (The default time of this function is unlimited and can not be adjusted) .

(9). **Preset** : Press preset button once before set function. The light on of preset. (The default time of cooking is 2 hours) , The cooker will be entered working state when press function button (If you do not press function/option button, the preset is inefficacy and the indicator off. The cooker will be standy state) .

4. The cooking time can be adjustedas your desired to reach the best effect during cooking.
5. If you think the food cooked desired for some time, you only press the stop button, the cooker is stopped work and entered standby state.
6. Please unplug the power cord after use.

Gentle Reminder :

1. Do not add too much water into the main body to cxceed the maximum water lavel mark. (without inner pot set in position) .
2. In order to sure the various foods effect of cooking. (except function of "yoghourt","keep warm") The default time is accounted after water boiled. For example: The default time of "Bird's nest" is 20 minutes. It means stew "Bird's nest" for 20 minutes after water boiled and keep warm after water boiled and keep warm automatically.
3. If you want to open the lid when stewing, please press stop button to stop stewing to avoid hot water scald.
4. Please use boiled water to disinfect inner pot and cover before making yoghourt.
5. After the function of "yoghourt" finished, the stewpot will be entered standby sate.
6. After yoghourt finished, it should shown milk white or slight yellow, coagulate fine and smooth, without air bubble. If coagulate untidy, with air bubble or musty taste, it must be pollution by bacteria which can not be eaten.
7. You can season and eat after the yoghourt made finished. Please reserve the yoghourt into the fridge if you do not eat it immediately.
8. The default time of keep warm for all functions are unlimited Please press cancel button as per your desired.

MAINTENANCE SERVICE

1. Cleaning :

①. Always turn off the stewpot and unplug the power cord after use.

②. Use detergent and cleaning sponge for washing the ceramic. parts and upper lid, use semi-wet towel to clean the inner main body. Do not use steel cleaning ball to avoid damages to clean the surfaces.

③. Use wet towel to clean the surface, do not use any corrosive liquid to clean the stewpot.

④. To avoid electric shock and malfunctions ,when doing and cleaning, do not immerse the whole unit in water for cleaning.

⑤. Please clean the stewpot if long time not using, pack in box and keep in dry and ventilated place.

2. Trouble and Remedy :

No.	Malfunction	Malfunction reason	Method
1	No power	power supply cord not into the plug	Please check whether power supply cord into the plug
		malfunction	Please send to our service center
2	Buzzer	No water in stewpot cused overheating protection	Please cut off the power, add water into the stewpot, restart
3	Other failure to work properly	malfunction	Please send to our service center

3. Nonprofessional staff do not remove or repair of the product.
4. If the power cord is broken, please buy the appropriative power cord from our distributor or service center.
5. If the stewpot has malfunctio, do not repair by yourself, please send it to our customer service to repair it.
6. The ceramic is fragile goods, we are not offer the guarantee repair.

PACK LIST

Set Contents	Unit	Quantity
Stewpot	set	1
Power supply	cordpiece	1
User's Manual	booklet	1
Warranty Card	piece	1